

Pressure switches for air DL

TECHNICAL INFORMATION

- Monitoring of air, flue gas and other non-aggressive gases
- High switching point stability
- Switching point selection via hand wheel or adjusting screw
- Screw terminals or AMP plugs for electrical connections
- Flexible mounting options



Contents

Contents	2	5.1 Intrinsically safe circuit without monitoring for cable faults	23
1 Application	4	5.2 Intrinsically safe circuit with monitoring for cable discontinuities	23
1.1 Application examples	5	5.3 Intrinsically safe circuit with monitoring for cable faults and short-circuits	23
1.2 Mounting examples	8	6 Selection	24
1.2.1 Simple mounting	8	6.1 ProFi	25
1.2.2 Mounting without the need for tools or screws	8	6.2 DL..K selection table	25
1.2.3 Pressure-resistant mounting on mounting plate	9	6.2.1 Electrical connection of DL 3,3–40K	25
1.2.4 Rugged, locked mounting	9	6.3 DL 2–35E selection table	26
1.2.5 Mounting directly on the fan motor	10	6.3.1 Electrical connection of DL 2–35E	26
1.3 Protection against pressure surges	11	6.3.2 Switching differential/switching point of DL 2E, DL 4E depending on installation position	26
1.4 Clearer handling in complex installations	11	6.4 DL..A, DL..K selection table	27
1.5 Tube set with diverse possible applications	12	6.4.1 Electrical connection DL..A, DL..K	28
1.6 Easier diagnosis and maintenance	13	6.4.2 Test key on DL 5–150A	28
2 Certification	14	6.5 DL 1–50E selection table	29
2.1 Certificate download	14	6.5.1 Electrical connection of DL 1–50E-1	29
2.2 Declaration of conformity	14	6.5.2 Test tapping point on DL 5–50E-1P	29
2.3 FM approved	14	7 Project planning information	30
2.4 UR recognized	14	7.1 Pressure switch with NBR diaphragm	30
2.5 UL listed	14	7.2 Installation	30
2.6 AGA approved	15	7.2.1 Installation position	30
2.7 Eurasian Customs Union	15	8 Accessories	32
2.8 Overview of product approvals	16	8.1 Securing clip S	32
3 Function	17	8.2 Securing clip D	32
3.1 Slide show – Positive pressure	19	8.3 Fastening set with screws, L-shape bracket	33
3.2 Slide show – Negative pressure	20	8.4 Fastening set with screws, L-shape bracket	33
3.3 Slide show – Differential pressure	21	8.5 Fastening set with screws, Z-shape bracket	33
4 Wiring	22	8.6 Fastening set with screws, U-shape bracket	34
4.1 Rising pressure monitoring	22	8.7 Tube set	34
4.2 Falling pressure monitoring	22	8.8 Tube set	34
4.3 Connection diagram	22		
5 DL in Zone 1 (21) and 2 (22) hazardous areas	23		

8.9 Pilot lamp set, red or blue	36
8.10 LED set, red/green.	36
8.11 Standard coupler plug set	36
8.12 Motor flange adapter	36
8.13 Damping nozzle.	36
8.14 Restrictor orifice.	37
8.15 Colour coordination set	37
8.16 External adjustment.	37
8.17 Cover IP 65 with pressure equalization element . . .	37
8.18 Seal set DL 2–35E	38
8.19 DL 1–50E: grommet	38
9 Technical data	39
9.1 Switching capacity.	39
9.2 DL..K.	39
9.2.1 Ambient conditions.	39
9.2.2 Mechanical data.	39
9.2.3 Electrical data.	40
9.2.4 Dimensions	40
9.2.5 Adjusting range	40
9.3 DL..A, DL..K	41
9.3.1 Mechanical data.	41
9.3.2 Electrical data.	41
9.3.3 Dimensions	41
9.3.4 Adjusting range	43
9.4 DL 1–50E	44
9.4.1 Dimensions.	44
9.4.2 Adjusting range	45
9.5 DL 2–35E	46
9.5.1 Dimensions.	46
9.5.2 Adjusting range	47
10 Converting units	48
11 Maintenance cycles	49
For more information	50

1 Application

Pressure switches for air DL can be used as positive pressure switches, vacuum sensors or differential pressure switches for air, flue gas and other non-aggressive gases. They are not suitable for fuel gases. They monitor extremely low pressure differentials.

They trigger switch-on, switch-off or switch-over operations if a set switching point is reached. This switching point can be adjusted using a hand wheel or, if required, it can be fixed using an adjusting screw.

The diaphragm pressure switch with micro switch features particularly high contact reliability as low gas release components are used.

1.1 Application examples



DL 3,3-40K



DL 3K



DL 5-150A

DL..K is used in air-conditioning systems and kitchens due to its low adjusting range (from 20 Pa).

The pneumatic and electrical connections on DL 3,3-40K are accessible from the same side in order to ensure space-saving and easy-to-fit installation.

The switching point can be infinitely adjusted using the hand wheel.



Filter monitoring in kitchens

1 Application



DL 1,5-3A, DL 3K



DL 5-150A, DL 5-150K

DL..A, DL..K are used for controlling butterfly valves for air and fire dampers in firing systems, and for fan monitoring. DL 1,5A (-0.5 to +1.5 mbar) is used in laboratories and special applications in particular.

On DL..A, the positive pressure can be connected via a threaded connection (Rp 1/4) in the lower housing section.

DL 5-150A(K) with tube connection for negative pressure also has a threaded connection Rp 1/8 for negative pressure. To use the threaded connection, the tube connection must be unscrewed (minus).

The DL..AH/..HN, DL..KH/..KN can be supplied with manual reset function and is used, for example, for siphon monitoring on heating systems.




Fan monitoring in laboratories

1 Application



DL 2-35E

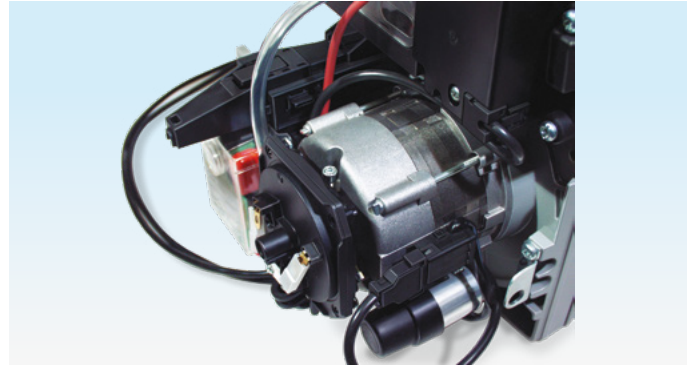

Pressure switch DL mounted on fan motor using a motor flange adapter



DL 1-3E, DL 5-50E

Thanks to its slim design and low adjusting range (20 to 5000 Pa/0.08 to 20 "WC), the fields of application of DL..E include fan monitoring on condensing boiler units or on atmospheric wall-mounted units with flue gas fan.

On request, the air pressure switch DL..E can be supplied with only one NO contact, e.g. for a non-interchangeable connection to boiler control systems.



Pressure switch DL safeguards every flue gas route in the cascade


1.2 Mounting examples

1.2.1 Simple mounting



Simple front mounting. Mounting using two screws on the same side is sufficient and prevents the pressure switch being subjected to mechanical stress, see page 30 (7.2 Installation).

1.2.2 Mounting without the need for tools or screws

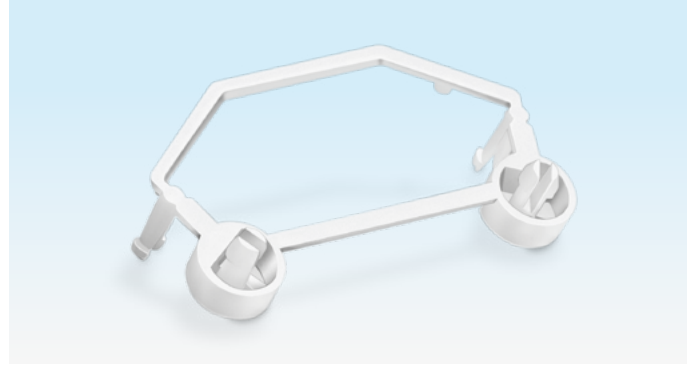


Securing clip S




The securing clip S allows the pressure switch to be easily installed and removed. Only two holes in the mounting plate or air duct are required for secure mounting. See page 32 (8.1 Securing clip S).

1.2.3 Pressure-resistant mounting on mounting plate

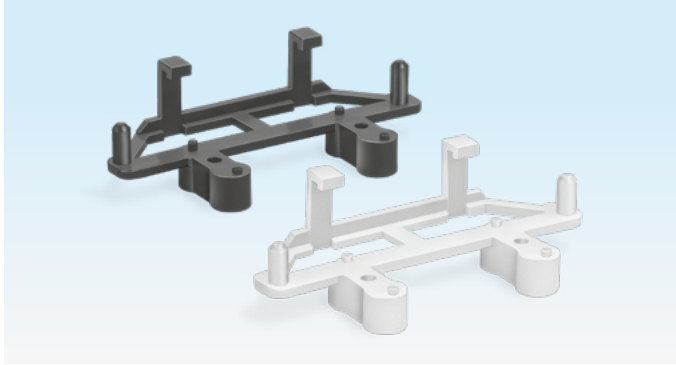


Securing clip D

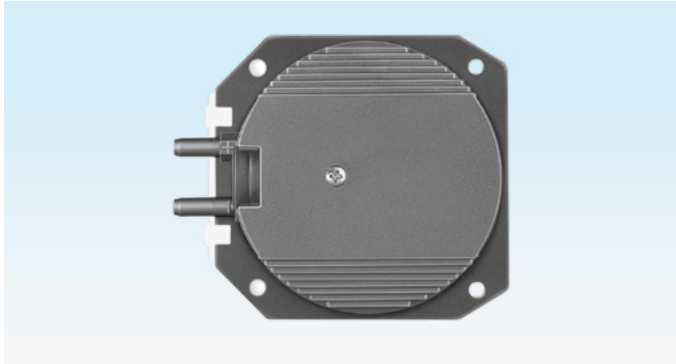

Attach the D clip to the mounting plate with the two screws supplied. Simply push the pressure switch onto the clip. The pressure switch can now be detached again at any time without the need for tools.


To reduce the amount of assembly work required, the pressure switch may, on request, be supplied with the clip already fitted. See page 32 (8.2 Securing clip D).

1.2.4 Rugged, locked mounting

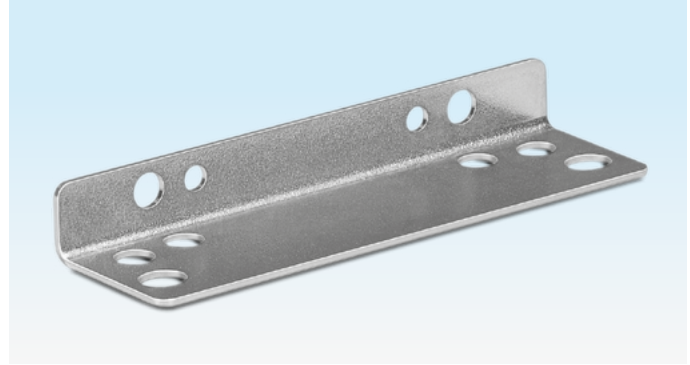

L-angle bracket

Mounting, see accessories, page 33 (8.3 Fastening set with screws, L-shape bracket).

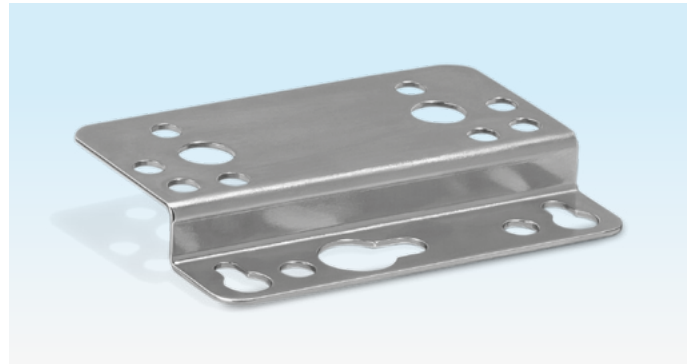


Z-angle bracket

Mounting, see accessories, page 33 (8.5 Fastening set with screws, Z-shape bracket).




The L-shaped or Z-shaped angle bracket offers diverse mounting options, even with only one screw, and fast installation and removal. The angle bracket increases the distance between the pressure switch and warm boiler walls.

1.2.5 Mounting directly on the fan motor

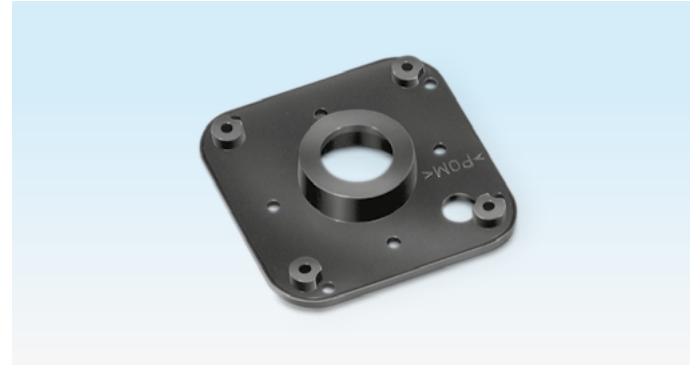


Motor flange adapter

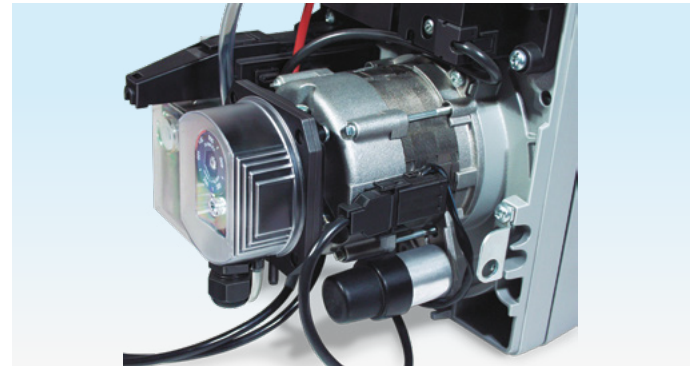


The pressure switch can be installed in a space-saving manner using the motor flange adapter. It is not necessary to drill holes for mounting. See accessories, page 36 (8.12 Motor flange adapter).

1.3 Protection against pressure surges

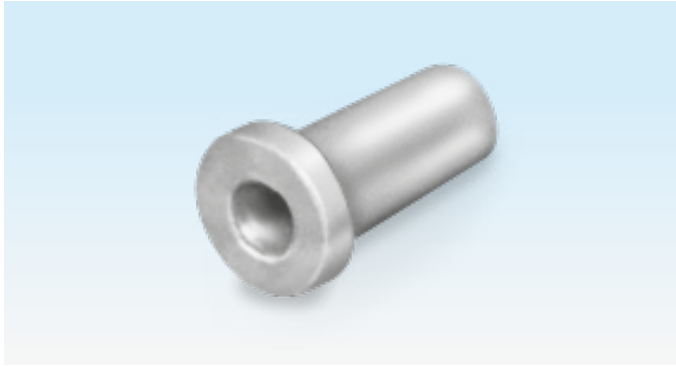


Damping nozzle

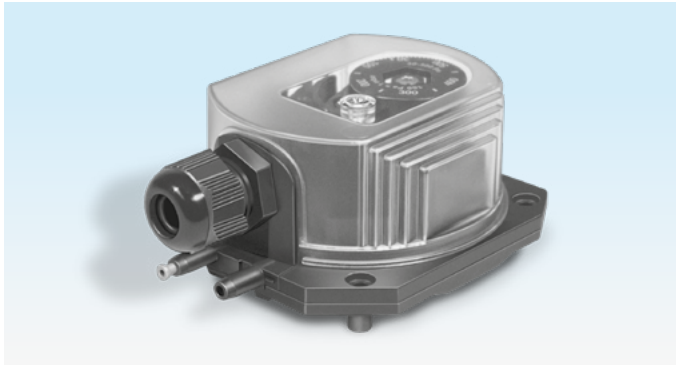


The damping nozzle attenuates pressure fluctuations and pressure surges. A brief pressure surge occurs in the air supply line when igniting a burner, for example. See accessories, page 36 (8.13 Damping nozzle).

1.4 Clearer handling in complex installations

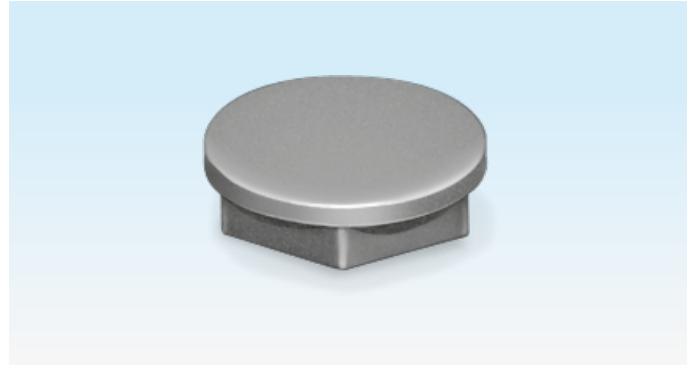

Colour coordination set

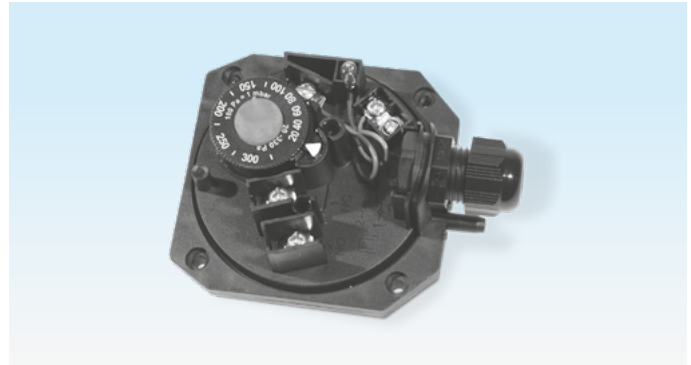


In order to facilitate reading for pressure switches with the same switching point setting, for example, a scale mark can be used. The scale mark can simply be clipped on and is available in different colours as a colour coordination set, see accessories, page 37 (8.15 Colour coordination set).

1.5 Tube set with diverse possible applications




Tube set

Duct connection flanges and angle connectors connect the pressure switch and pressure test point. See accessories, page 34 (8.8 Tube set).

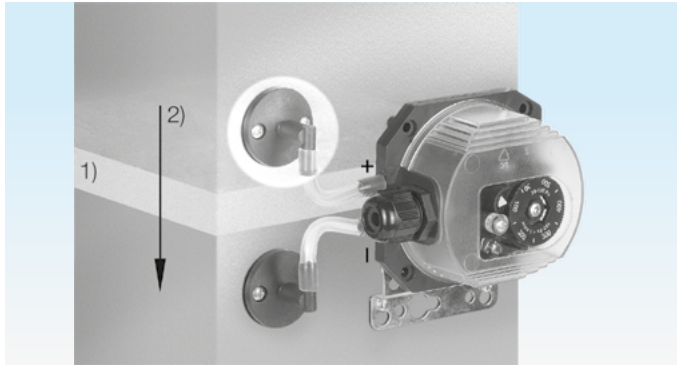


- 1) Filter pad
- 2) Flow direction

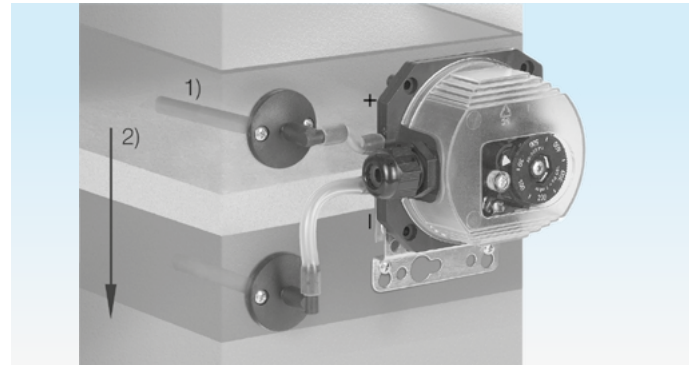

- 1) Extension
- 2) Flow direction


Using the extension, the pressure switch can be used on insulated and lagged ducts.

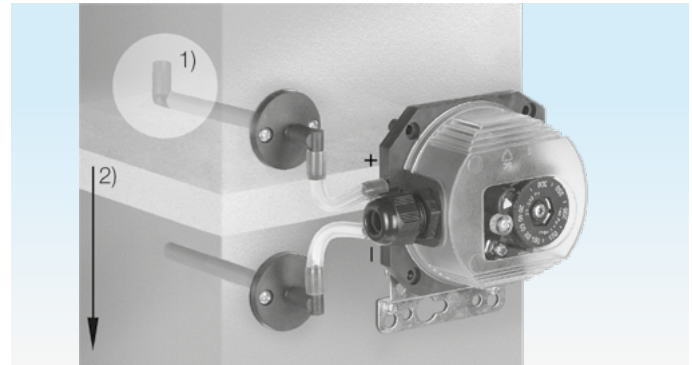


- 1) Angle connector
- 2) Flow direction

The angle connector reinforces the Δp signal if it is too low for the pressure switch adjusting range.

1.6 Easier diagnosis and maintenance

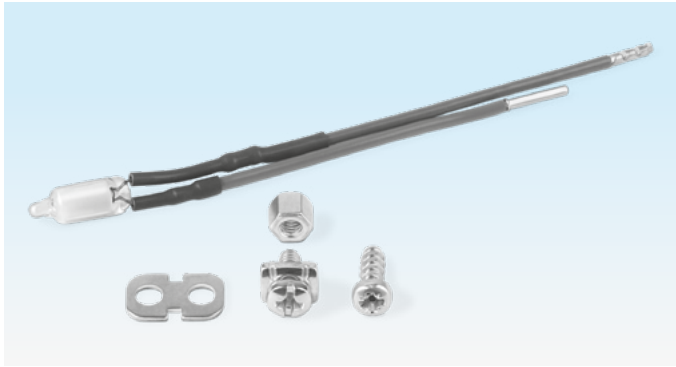

Pilot lamp set

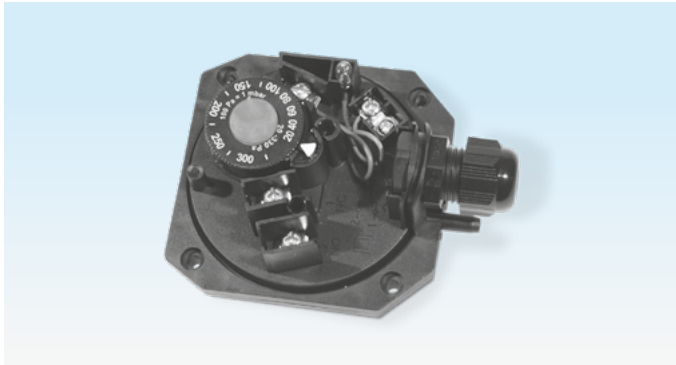

Either a red or a blue pilot lamp, or a red-green LED (24 V/230 V) indicates the switching status of the pressure switch. See accessories, page 36 (8.9 Pilot lamp set, red or blue) or page 36 (8.10 LED set, red/green).

2 Certification

2.1 Certificate download

Certificates – see www.docuthek.com

2.2 Declaration of conformity



We, the manufacturer, hereby declare that the products DL with product ID No. CE- DL comply with the requirements of the listed Directives and Standards.

Directives:

- 2014/35/EU – LVD
- 2014/30/EU – EMC
- 2011/65/EU – RoHS II
- 2015/863/EU – RoHS III

Regulation:

- (EU) 2016/426 – GAR

Standards:

- DIN EN 1854:2024-10 (EN 1854:2022+A1:2023)

The relevant product corresponds to the tested type sample.

The production is subject to the surveillance procedure pursuant to Regulation (EU) 2016/426 Annex III paragraph 3.

Elster GmbH

2.3 FM approved



Factory Mutual Research Class: 3510 Flow and pressure safety switches. Designed for applications pursuant to NFPA 85 and NFPA 86.

2.4 UR recognized

USA and Canada



AMP plug connection, see page 16 (2.8 Overview of product approvals).

Underwriters Laboratories – UL 353 “Limit Controls”.

2.5 UL listed

USA and Canada



Electrical connection via screw terminals, see page 16 (2.8 Overview of product approvals).

Underwriters Laboratories – UL 353 “Limit Controls”.

2.6 AGA approved



Australian Gas Association, Approval No.: 5484.
www.agasn.au

2.7 Eurasian Customs Union




The products DL meet the technical specifications of the Eurasian Customs Union.


2.8 Overview of product approvals

	Type	Condition
 2014/35/EU	DL 1-3E, DL 5-50E, DL 2-35E, DL 3,3-40K, DL 3K, DL 5-150K, DL 1,5-3A, DL 5-150A	
 (EU) 2016/426 – GAR	DL 1-3E, DL 5-50E, DL 2-35E, DL 3,3-40K, DL 3K, DL 5-150K, DL 1,5-3A, DL 5-150A	
	DL 1-3E, DL 5-50E, DL 2-35E, DL 3,3-40K, DL 3K, DL 5-150K, DL 1,5-3A, DL 5-150A	
	DL 1-3E, DL 5-50E, DL 3A, DL 5-150A, DL 3K, DL 5-150K	
	DL 1-3E, DL 5-50E, DL 2-35E, DL 3,3-40K, DL 3K, DL 5-150K, DL 1,5-3A, DL 5-150A	
	DL 1-3ET, DL 5-50ET, DL 2-35ET, DL 3,5-40KT-3, DL 3AT, DL 3KT, DL 5-50AT, DL 5-50KT	
	DL 3AT, DL 5-50AT, DL 3,5-40KT-3 (except DL 3,3KT-3/DL 5,1KT-3), DL..AHT, DL..ANT, DL..KHT, DL.. KNT DL 3KT, DL 5-50KT	DL...-3: with screw terminals
	DL 2-35ET, DL 3,5-40KT-1 (except DL 3,3KT-1/DL 5,1KT-1), DL 1-3ET, DL 5-50ET	DL...-1: with AMP plugs

3 Function

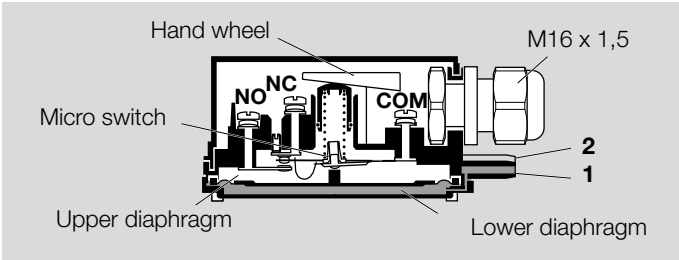


DL..K

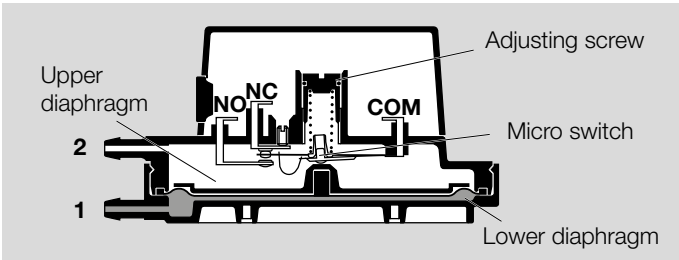

DL..E

The air pressure switch DL switches in the event of rising or falling pressure. Once the set switching point is reached, a micro switch is activated in the DL.

The switching pressure is adjusted against a spring force using a hand wheel or an adjusting screw.

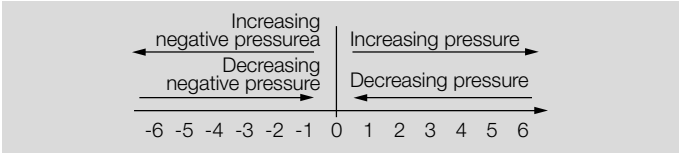

Positive pressure measurement

Positive pressure measurement is designed, for example, for checking the fan function or measuring the min./max. pressure.

The positive pressure is measured in the lower diaphragm chamber, port 1. The upper diaphragm chamber is ventilated via port 2.

Exception for DL 1.5A with hand wheel setting in the negative range:

The positive pressure is measured in the upper diaphragm chamber, port 2. The lower diaphragm chamber is ventilated via port 1.

Negative pressure measurement

Negative pressure measurement is designed, for example, for checking air locks or the fan function.

The negative pressure is measured in the upper diaphragm chamber, port 2. The lower diaphragm chamber is ventilated via port 1.

Exception for DL 1.5A with hand wheel setting in the negative range:

The negative pressure is measured in the lower diaphragm chamber, port 1. The upper diaphragm chamber is ventilated via port 2.

Differential pressure measurement

Differential pressure measurement is designed for safeguarding an air flow rate or for monitoring filters and fans, for example.


The higher absolute pressure is connected to port 1 and the lower absolute pressure to port 2. The remaining ports must be tightly plugged.

3 Function

Exception for DL 1.5A with hand wheel setting in the negative range:


The higher absolute pressure is connected to port 2 and the lower absolute pressure to port 1. The remaining ports must be tightly plugged.

3.1 Slide show – Positive pressure

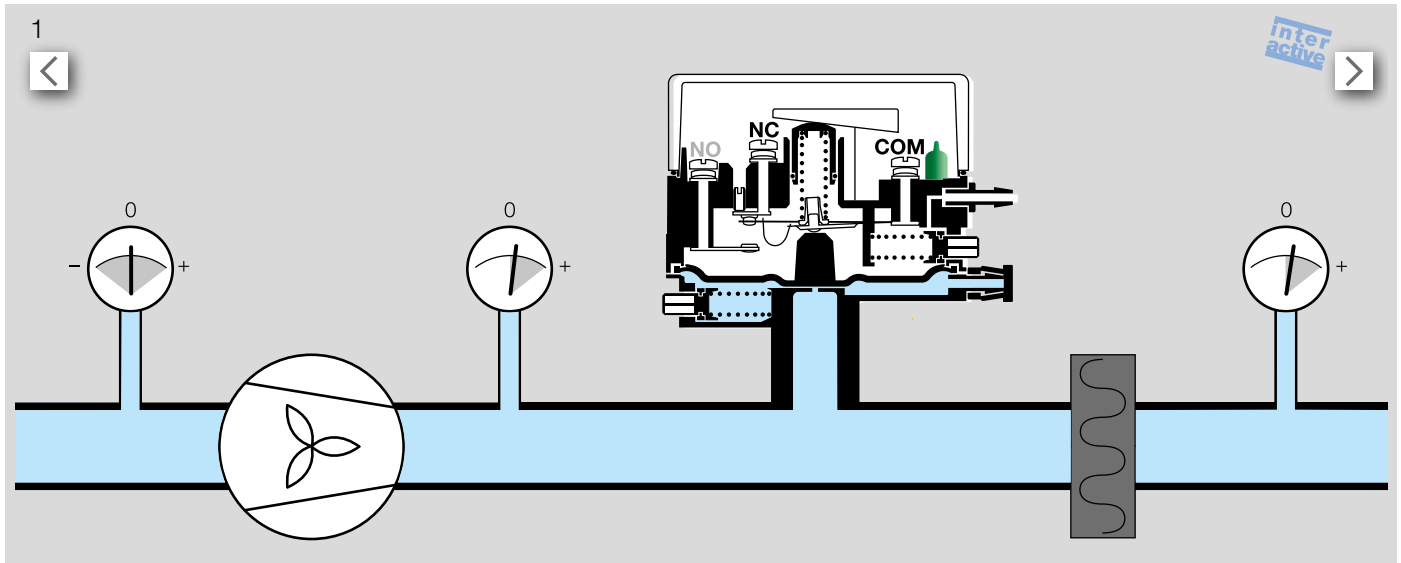


- 1 The set switching point has not yet been reached.
- 2 The fan is running, the pressure below the diaphragm rises.
- 3 The positive pressure exceeds the spring force and lifts the diaphragm.
- 4 The set switching point is reached and the micro switch switches to COM/NO. The LED lights up.
- 5 The lower chamber can be vented by pressing the test key (DL 5–150A).
- 6 The diaphragm is depressurized and the pressure switch switches back to the NC contact.

3.2 Slide show – Negative pressure

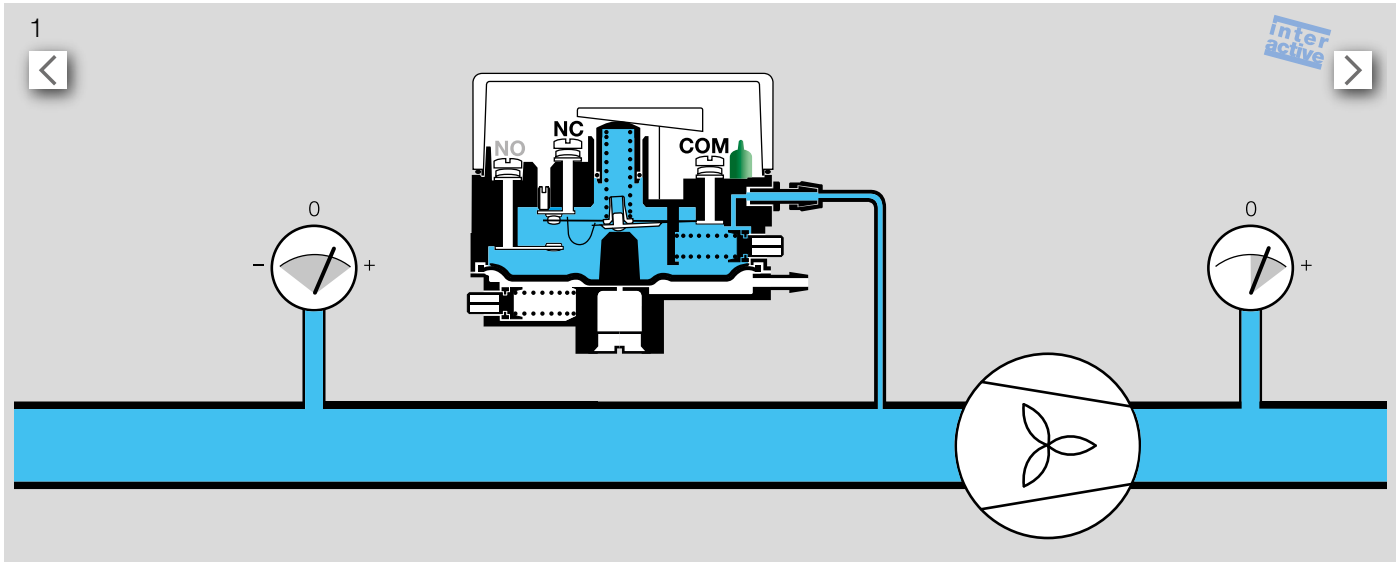

- 1 The set switching point has not yet been reached.
- 2 The fan is running, the negative pressure increases.
- 3 The negative pressure exceeds the spring force and sucks the diaphragm upwards.
- 4 The set switching point is reached and the micro switch switches to COM/NO. The LED lights up.
- 5 The upper chamber can be vented by pressing the test key (DL 5–150A).
- 6 The negative pressure decreases and the pressure switch switches back to the NC contact.

3.3 Slide show – Differential pressure

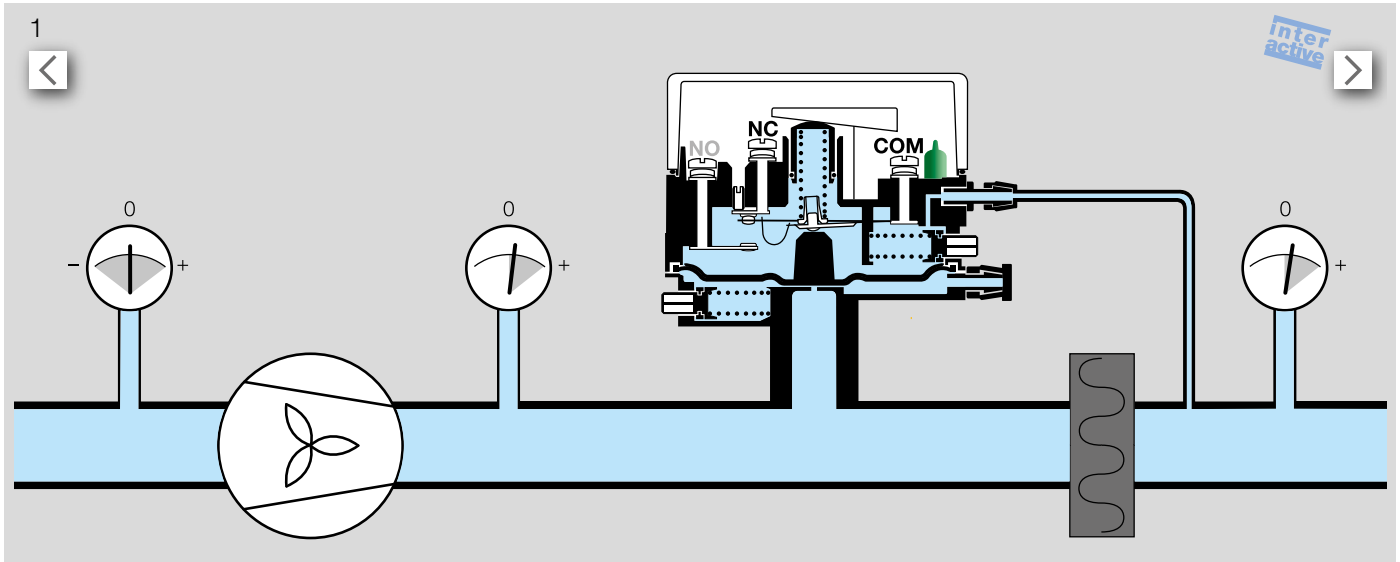


- 1 The set switching point has not yet been reached.
- 2 The fan is running, the pressure increases.
- 3 The differential pressure exceeds the spring force and acts on the diaphragm.
- 4 The set switching point is reached and the micro switch switches to COM/NO. The LED lights up.
- 5 The upper and lower chambers can be vented by pressing both test keys simultaneously (DL 5–150A).
- 6 The differential pressure drops and the pressure switch switches back to the NC contact.


4 Wiring

Vapours containing silicone can adversely affect the functioning of electrical contacts. When using silicone tubes, only use silicone tubes which have been sufficiently cured. In the case of high humidity or aggressive gas components, we recommend using a pressure switch with gold contact due to its higher resistance to corrosion. Closed-circuit current monitoring is recommended under difficult operating conditions.

In the case of low switching capacities, such as 24 V, 8 mA, for example, we recommend using an RC module ($22\ \Omega$, $1\ \mu\text{F}$) in air containing silicone or oil.

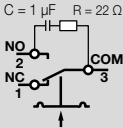


4.1 Rising pressure monitoring

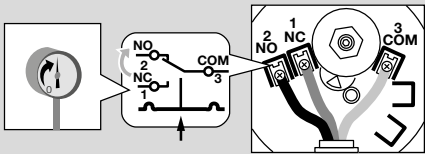

When the set switching point is reached, the contact closes from COM 3 to NO 2. Contact COM 3 to NC 1 is opened. With the NO contact, the NC contact is omitted.


4.2 Falling pressure monitoring

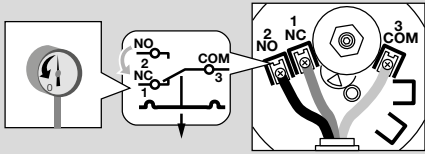


When the set switching point is reached, the contact closes from COM 3 to NC 1. Contact COM 3 to NO 2 is opened. With the NO contact, the NC contact is omitted.

4.3 Connection diagram


The connection of DL 1,5A depends on the positive or negative adjusting range.

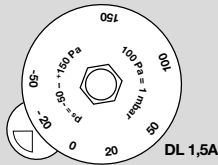

In the negative adjusting range, the template which can be found in the unit displays the connection diagram.

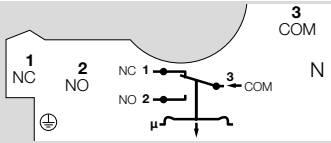

In the positive adjusting range, remove the template and wire the unit as shown in the engraved connection diagram.



5 DL in Zone 1 (21) and 2 (22) hazardous areas

Pressure switch DL can be used in Zone 1 (21) and 2 (22) hazardous areas if an isolating amplifier is installed upstream in the safe area as “Ex-i” apparatus pursuant to EN 60079-11 (VDE 0170-7):2012.


DL as “simple electrical apparatus” pursuant to EN 60079-11:2012 corresponds to the Temperature class T6, Group II. The internal inductance/capacitance is $L_i = 0.2 \mu\text{H/Ci} = 8 \text{ pF}$.

The isolating amplifier transfers the DL's signals from the explosion-hazard area to the safe area. Depending on the design of the intrinsically safe circuit, the explosion-hazard area can be monitored for cable faults, cable discontinuities or short-circuits.


Ensure that standard-compliant wiring pursuant to EN 60079 is used.

When operating in Zones 21 and 22, the 1/8" connecting thread or the tube connection for the surrounding air or medium connection must be protected from dirt particles by a separate filter.


5.1 Intrinsically safe circuit without monitoring for cable faults

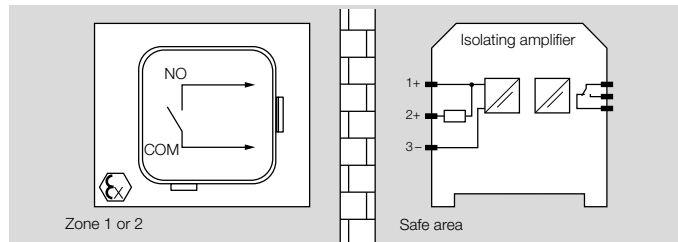

5.2 Intrinsically safe circuit with monitoring for cable discontinuities

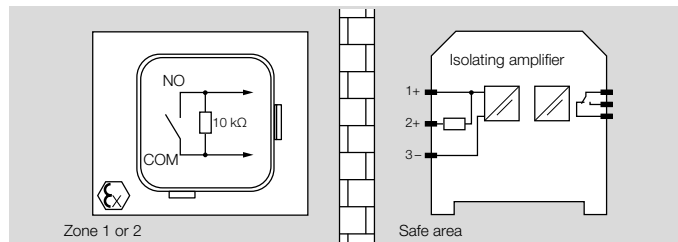

5.3 Intrinsically safe circuit with monitoring for cable faults and short-circuits

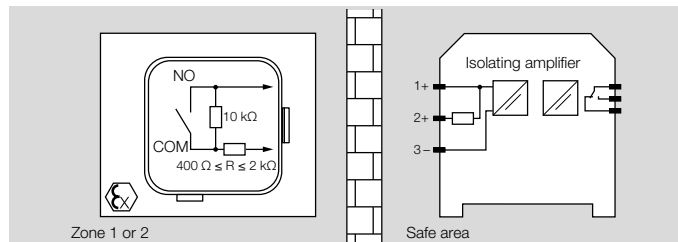

6 Selection

Type	Frequent application		Version													Mounting			Accessories			Enclosure [IP]		
	Air-conditioning systems/ kitchens	Condensing boilers Laboratories, industrial firing- systems, butterfly valves for air and fire dampers	Adjusting range in PA/°WC	Hand wheel	Adjusting screw	Screw terminals	AMP plugs	Tube connection	Threaded connection	Pilot lamp/Pilot LED	Standard socket set	Test key in lower chamber	Test key in upper chamber	Test measuring instrument/ pressure signal connection	Securing clip S	Securing clip D	L-angle bracket	Z-angle bracket	U-angle bracket	External adjustment	Tube set	Motor flange adapter	Standard	Maximum*
DL 3,3–40K	●			●	●		●	○	●		○	○				○	○	○	○		○	○	54	54
DL 2–35E		●		●		●		●	●						○	○	○	○			○	○	10/21	44
DL 1,5–3A			●	●	●		●		●	●	○	○						○	○	○	○	○	54	65
DL 5–150A			●	●	●		●		●	●	○	○	●	○				○	○	○	○	○	54	65
DL 10–150AH/..AN		●	●	●	●		●		●	●	○	○		○				○	○	○	○	○	54	65
DL 3K	●		●	●	●		●		●		○	○						●	○	○	○	○	54	65
DL 5–150K	●		●	●	●		●		●		○	○						●	○	○	○	○	54	65
DL 10–150KH/..KN		●	●	●	●		●		●		○	○						●	○	○	○	○	54	65
DL 1–3E		●		●		●		●	●						○			○	○		○	○	10/21	44
DL 5–50E		●		●		●		●	●					○				○	○		○	○	10/21	44

● = standard, ○ = available

* The enclosure depends on the version, installation position and whether a cable grommet is being used.

Adjusting range and switching hysteresis, see page 39 (9 Technical data).

6.1 ProFi

A web app selecting the correct product is available at www.adlatus.org.

6.2 DL..K selection table

Description	Code	DL..K	DL..KT	Condition
Air pressure switch	DL		•	
Adjusting range				
20–330 Pa	3.3			
30–350 Pa 0.12–1.4 "WC	3.5	•	•	
30–500 Pa 0.12–2 "WC	4.5	•	•	
100–510 Pa	5.1	•		
50–800 Pa 0.20–3.2 "WC	8	•	•	
100–1100 Pa 0.4–4.4 "WC	11	•	•	
400–1600 Pa 1.6–6.4 "WC	16	•	•	
200–2400 Pa 0.8–9.6 "WC	24	•	•	
500–4000 Pa 2–16 "WC	40	•	•	
With tube connection and hand wheel	K		•	
T-product	T		•	
With gold-plated contacts	G		•	DL..T: for voltages 12–250 V
Electrical connection				
With AMP plugs	-1		•	UL recognized
With screw terminals, IP 54	-3	•	•	UL listed


Description	Code	DL..K	DL..KT	Condition
Feedback				
Red/green pilot LED for 24 V DC/AC	K2	•		
Blue pilot lamp for 230 V AC	T			
Red/green pilot LED for 110 to 230 V AC	T2	•		
Blue pilot lamp for 120 V AC	N	•		
Z-angle bracket	W			

Order example


DL 3,3KG-1TW

6.2.1 Electrical connection of DL 3,3–40K

DL..K-1 for wiring with AMP plugs

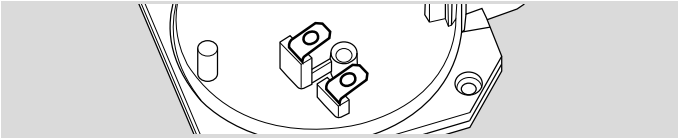

DL..K-3 for wiring via screw terminals

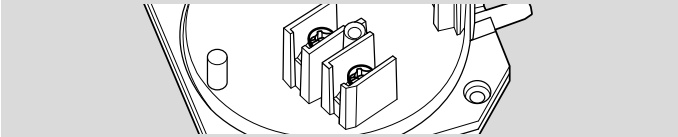

6.3 DL 2–35E selection table


Description	Code	DL 2–35E	DL 2–35ET	Condition
Air pressure switch	DL	•	•	
Adjusting range				
20–200 Pa 0.08–0.8 "WC	2	•	•	Adjusting range for DL 2ET: 0.12–0.8 "WC (30–200 Pa). Switching point: DL 2E = 20–30 Pa, DL 2ET = 0.08–0.12 "WC, when installed upside down.
50–400 Pa 0.2–1.6 "WC	4		•	
300–1400 Pa 1.2–5.6 "WC	14	•	•	
1200–3500 Pa 4.8–14 "WC	35	•	•	
With tube connection and adjusting screw	E	•	•	
T-product	T		•	UL recognized
Temperature range: -40 to +110°C (-40 to +230°F)	H	•		Adjusting range: DL 2EH = 45–200 Pa, DL 4EH = 70–400 Pa
With gold-plated contacts	G	•	•	DL...T: for voltages 12–250 V
Electrical connection via AMP plugs	-1	•	•	
With test tapping point	P	•		
Z-angle bracket	W	•		

Order example


DL 2EHG-1PW

6.3.1 Electrical connection of DL 2–35E

Wiring with AMP plugs

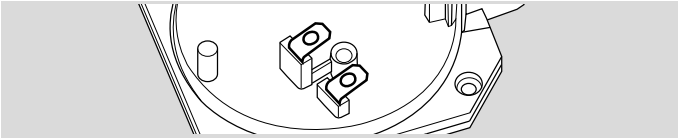

6.3.2 Switching differential/switching point of DL 2E, DL 4E depending on installation position

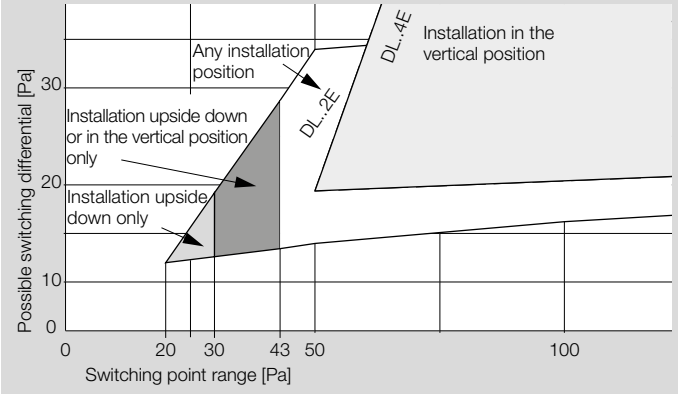

6.4 DL..A, DL..K selection table

Description	Code	DL..A, DL..K	DL..AT, DL..KT	Condition
Air pressure switch	DL	•	•	
Adjusting range				
-50–150 Pa	1.5	•		Available as DL..A
20–300 Pa 0.12–1.2 "WC	3	•	•	
40–500 Pa 0.2–2 "WC	5	•	•	
100–1000 Pa 0.4–4 "WC	10	•	•	
0.25–3 kPa	30	•	•	
0.25–5 kPa 1–20 "WC	50	•	•	
3–15 kPa	150	•	•	
Housing				
With Rp 1/4 threaded connection and tube connection with hand wheel	A	•	•	
With tube connection and hand wheel	K	•	•	
Function				
Locks off with rising pressure	H	•	•	For DL..10, ..50, ..150
Locks off with falling pressure	N	•	•	For DL..10, ..50, ..150
T-product	T		•	
With gold-plated con- tacts	G	•	•	DL..T: for voltages 12– 250 V


Description	Code	DL..A, DL..K	DL..AT, DL..KT	Condition
Electrical connection				
With screw terminals	-3	•	•	
With screw terminals and M16 cable gland, IP 65	-4	•	•	
With 4-pin plug without socket	-5	•	•	
With 4-pin plug with socket	-6	•	•	
With 4-pin plug with socket, IP 65	-9	•	•	
Feedback				
Red/green pilot LED for 24 V DC/AC	K2	•	•	DL..KT-3 with screw terminals: UL listed
Blue pilot lamp for 230 V AC	T	•	•	DL..KT-3 with screw terminals: UL listed
Red/green pilot LED for 110 to 230 V AC	T2	•	•	DL..KT-3 with screw terminals: UL listed
Blue pilot lamp for 120 V AC	N	•	•	DL..KT-3 with screw terminals: UL listed
Measuring instrument connection				
With test tapping point	P	•		For DL 5–150K
Test key				
With 1 test key (lower chamber +)	1	•		For DL 5–150A
With 2 test keys (upper chamber -, lower cham- ber +)	2	•		For DL 5–150A
External adjustment	A	•		
Z-angle bracket	W	•		

Order example

DL 5KG-3TAW

6.4.1 Electrical connection DL..A, DL..K


Wiring via screw terminals

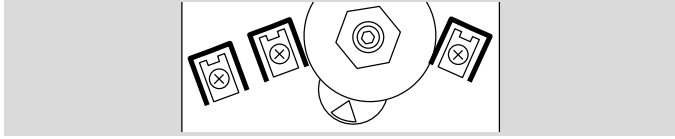

6.4.2 Test key on DL 5–150A

DL 5–150A..1: test key in lower chamber (+) or

DL 5–150A..2: test key in lower chamber (+) and upper chamber (-).

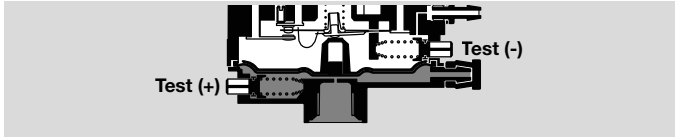

6.5 DL 1–50E selection table


Description	Code	DL 1–50E	DL 1–50ET	Condition
Air pressure switch	DL	•	•	
Adjusting range				
20–100 Pa 0.08–0.4 "WC	1	•	•	Settings when in- stalled upside down
30–300 Pa 0.12–1.2 "WC	3	•	•	
40–500 Pa 0.16–2 "WC	5	•	•	Adjusting range for DL 5ET : 0.2–2 "WC (50–500 Pa)
100–1000 Pa 0.4–4 "WC	10	•	•	
250–5000 Pa 1–20 "WC	50	•	•	
With tube con- nection and ad- justing screw	E	•	•	
T-product	T		•	UL recognized
With gold-plated contacts	G	•		DL..T: for voltages 12–250 V
Electrical connec- tion via AMP plugs	-1	•	•	
Z-angle bracket	W	•		

Order example


DL 1EG-1W

6.5.1 Electrical connection of DL 1–50E-1

Wiring with AMP plugs

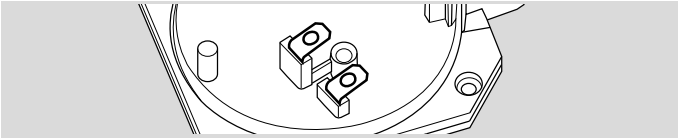

6.5.2 Test tapping point on DL 5–50E-1P

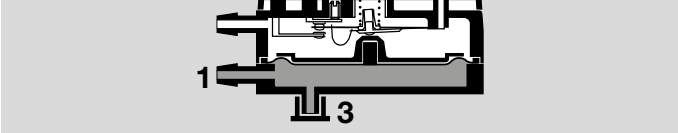

A measuring instrument can be connected to port **3** or the boiler pressure can be queried.

If port **3** is used for pressure measurement, the sealing cap must be transferred from port **3** to **1**.

7 Project planning information

7.1 Pressure switch with NBR diaphragm

Long-term use in the upper ambient temperature range accelerates the ageing of the elastomer materials and reduces the service life (please contact manufacturer).

Ozone concentrations exceeding 200 µg/m³ accelerate the ageing of elastomer materials and reduce the service life.

7.2 Installation

Protect the connections against dirt or moisture in the medium to be measured or the surrounding air. If necessary, install a filter.

When installing outdoors, place the pressure switch in a roofed area and protect from direct sunlight (even IP 65 version). To avoid condensation, the cover with pressure equalization element can be used. See page 37 (8.17 Cover IP 65 with pressure equalization element).

In case of highly fluctuating pressures, install a restrictor orifice. See page 36 (8.13 Damping nozzle) or page 37 (8.14 Restrictor orifice).

In the case of an uneven mounting surface, secure the pressure switch to the mounting plate or air duct with only two screws on the same side in order to avoid subjecting the pressure switch to mechanical stress.

For attachment to a mounting plate using self-tapping screws for plastic, note the specified screw length. Longer screws can cause damage in the pressure switch.

Specifications for screw length, see page 39 (9 Technical data).

7.2.1 Installation position

Condensation must not be allowed to get into the housing. If possible, install pipework with an ascending gradient. Otherwise, there is a risk of icing of condensation at subzero temperatures, the switching point shifting or corrosion in the device which can lead to malfunctions.

Installation in the vertical or horizontal position, or sometimes upside down, preferably with vertical diaphragm. If installed in a vertical position, the switching point p_S will correspond to the scale value SK set on the hand wheel. If installed in another position, the switching point p_S will change and no longer correspond to the set scale value SK. Switching point p_S must be checked.


$p_S = SK$	SK + 13 Pa [+ 0,052 "WC]	SK - 13 Pa [- 0,052 "WC]
DL 3,3 – 40K		
		

Diaphragm: LSR




$p_S = SK$	SK + 13 Pa [+ 0,052 "WC]	SK - 13 Pa [- 0,052 "WC]
DL 2 – 35E		
		

Diaphragm: LSR


7 Project planning information

$p_s = SK$	SK + 18 Pa [+ 0,072 "WC]	SK - 18 Pa [- 0,072 "WC]
DL 1E, DL 3E		
		
DL 5E, DL 10E, DL 50E		
		

Diaphragm: NBR

$p_s = SK$	SK + 18 Pa [+ 0,072 "WC]	SK - 18 Pa [- 0,072 "WC]
DL 1,5A		
	 z. B. SK = -50: $p_s = -50 + 18 \text{ Pa}$ $p_s = -32 \text{ Pa}$	
DL 3K, DL 3A		
		
DL 5 - 150A, DL 5 - 150K		
		

Diaphragm: NBR


$p_s = SK$	SK + 18 Pa [+ 0,072 "WC]	SK - 18 Pa [- 0,072 "WC]
DL 10 - 150AH, ..AN, ..KH, ..KN		
		

Diaphragm: NBR

8 Accessories

8.1 Securing clip S

Only two holes in the mounting plate or air duct are required for secure mounting.

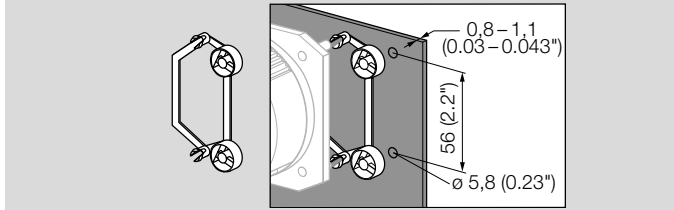


For DL 2-35E, DL 3,3-40K: Order No.: 34335764.


8.2 Securing clip D

For DL 2-35E, DL 3,3-40K.


For pressure-resistant mounting, the D clip is fitted to the mounting plate from the front or from the back. Simply push the pressure switch onto the clip.

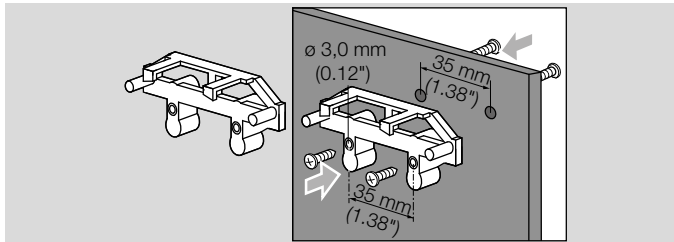

For attachment to the side of the pressure port: white clip. Order No.: 74921513.

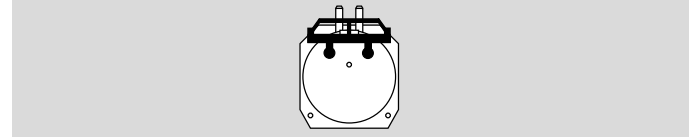


For attachment to the three other sides: blue clip. Order No.: 74921512.

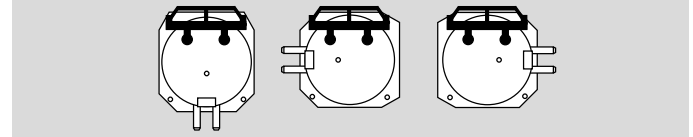

8.3 Fastening set with screws, L-shape bracket


L-shaped angle bracket (A) for DL 2–35E, DL 3,3–40K.

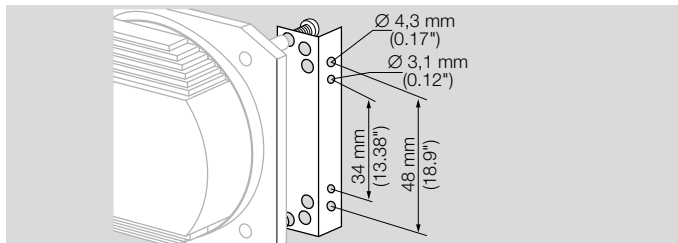

Order No.: 74919825.



8.4 Fastening set with screws, L-shape bracket

L-shaped angle bracket (B) for DL 2–35E, DL 3,3–40K.

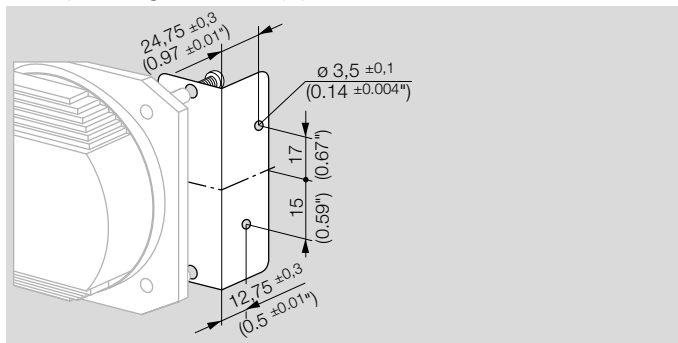

Order No.: 74921466.

8.5 Fastening set with screws, Z-shape bracket

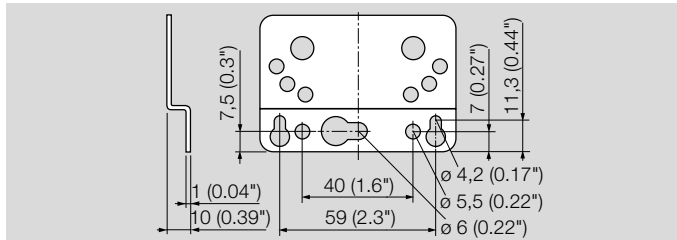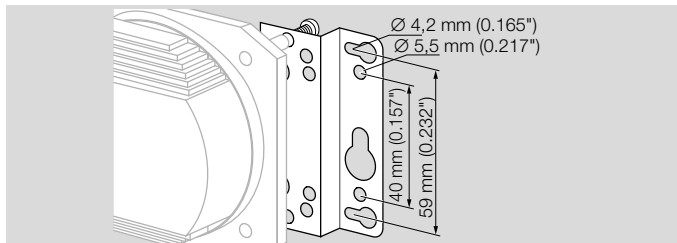

Fastening set for DL 2–35E, DL 4,5/8/16/24/40K. Z-shaped angle bracket with two M4.8 x 13 screws.

Order No. 74919824.

Fastening set for DL 5–50E, DL 5–150K. Z-shaped angle bracket with two M3 x 16 screws and two square nuts.


Order No. 74916158.

Fastening set for DL 3–150A, DL 3K and DL 1–3E.

Z-shaped angle bracket with two M4 x 8 screws.

Order No. 74913661.

8.6 Fastening set with screws, U-shape bracket

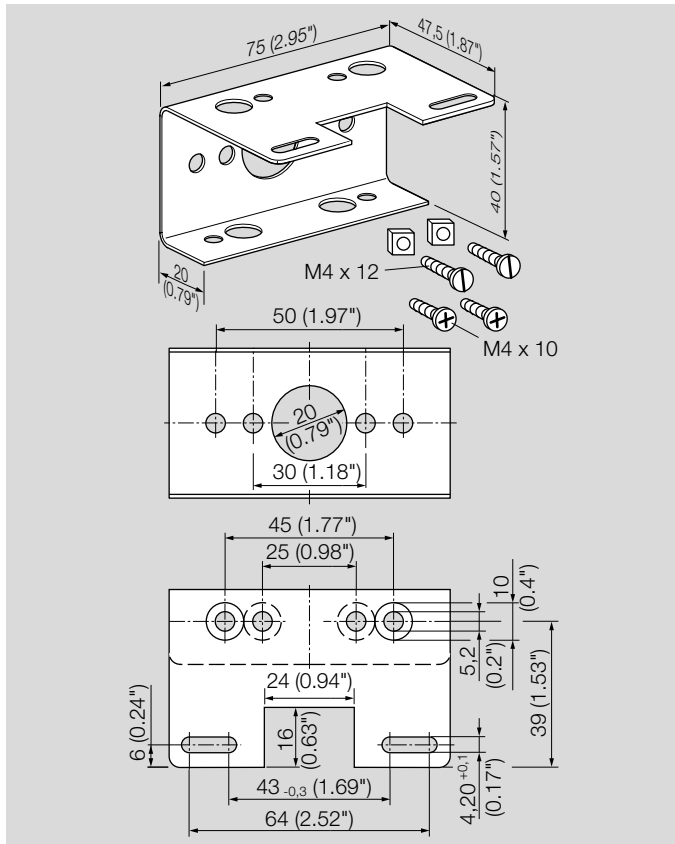


Fastening set for DL 5–50E, DL 5K, DL 10K, DL 50K and DL 150K. U-shaped angle bracket with two M3.5 x 16 screws. Order No. 74916184.

Fastening set for DL 3–150A, DL 3K and DL 1–3E. U-shaped angle bracket with two M4 x 8 screws. Order No. 74916161.

8.7 Tube set

To be used with air only.

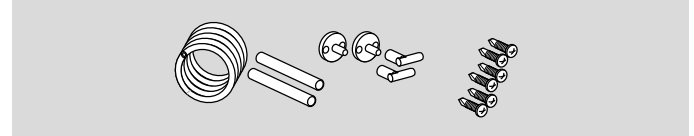

With 2 m PVC tube (Ø 4,75 x 1 mm), 2 duct connection flanges with screws, 2 x 90 mm extensions, 2 angle connectors for DL

Order No.: 74919272.

8.8 Tube set

To be used with air only.



8 Accessories

Tube set with 2 m PVC tube (Ø 4,75 x 1 mm), 2 duct connection flanges with screws, R 1/4 and R 1/8 connecting nipples.

Order No.: 74912952.

8.9 Pilot lamp set, red or blue



For DL..A, DL..K

Pilot lamp, red:

110/120 V AC, I = 1.2 mA, Order No.: 74920430.

230 V AC, I = 0.6 mA, Order No.: 74920429.


Pilot lamp, blue:

110/120 V AC, I = 1.2 mA, Order No.: 74916121.

230 V AC, I = 0.6 mA, Order No.: 74916122.

8.10 LED set, red/green


For DL..A, DL..K

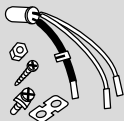

24 V DC, I = 16 mA; 24 V AC, I = 8 mA, Order No.: 74921089.

110 to 230 V AC, Order No.: 74923275


8.11 Standard coupler plug set



For DL..A, DL..K: Order No. 74916159.

8.12 Motor flange adapter

Set including retaining screws for direct mounting on the fan motor.



Order No.:

DL 5–50E: 74916149

DL 1–3E, DL 3–150A, DL 3–5K: 74916157

DL 5–150K: 74916156


DL 2/4/14/35E, DL 3,5/4,5/8/16/24/40K: 74920415

8.13 Damping nozzle



In the case of high pressure fluctuations, we recommend using a damping nozzle for tube connections: 10 x Damping nozzle, Ø = 0.8 mm (0.03"), Order No.: 75459541.

8.14 Restrictor orifice



For CE certified pressure switches.

In the case of high pressure fluctuations, we recommend using a restrictor orifice (contains non-ferrous metals).

Hole diameter 0.2 mm, Order No.: 75456321

Hole diameter 0.3 mm, Order No.: 75441317

8.15 Colour coordination set



The scale mark is available in each case as a 5-piece set.

Colour coordination set, blue, Order No.: 74921726,

Colour coordination set, yellow, Order No.: 74921727.


8.16 External adjustment



In order to set the switching pressure from the outside, the cover for external adjustment (6 mm Allen key) for DG..U/B/I and DL..3/5/10/50/150A/K can be retrofitted.

Order No.: 74916155

8.17 Cover IP 65 with pressure equalization element




For CE certified pressure switches.


To avoid the formation of condensation, the cover with pressure equalization element can be used. The diaphragm in the screw connector is designed to ventilate the cover, without allowing water to enter.

Order No.: 74923391

8.18 Seal set DL 2–35E

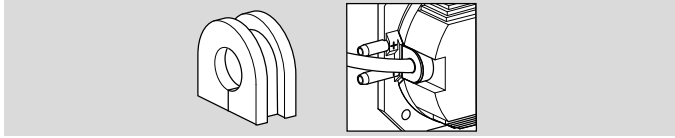

5 x grommets for enclosure IP 44 (IP 42) depending on the installation position.

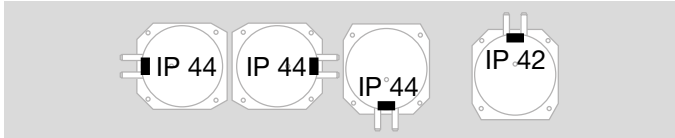


Installation in the horizontal position and upside down (connections pointing downwards): IP 44

Installation with connections pointing upwards: IP 42

5 x grommets for enclosure IP 44 (IP 42), Order No.: 74926293.


8.19 DL 1–50E: grommet

5x Grommet for enclosure IP 42.

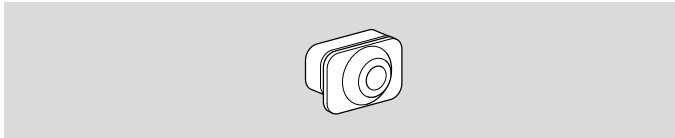

Order No.: 74926291

5x Grommet for enclosure IP 44.

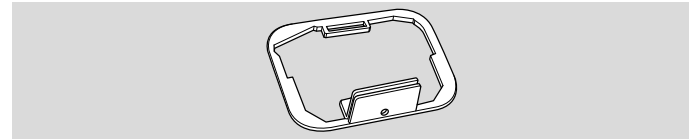

Order No.: 74926292

9 Technical data

Micro switch to EN 61058-1.

Gas types: air or flue gas, no flammable gases, no aggressive gases.

Icing, condensation and dew in and on the unit are not permitted.

Safety class II to VDE 0106-1.

This unit is not suitable for cleaning with a high-pressure cleaner and/or cleaning products.

9.1 Switching capacity

	U	I (cos φ = 1)	I (cos φ = 0.6)
DL	24–250 V AC	0.05–5 A	0.05–1 A
DL..G	5–250 V AC	0.01–5 A	0.01–1 A
DL..G	5–48 V DC	0.01–1 A	0.01–1 A
DL..T	30–240 V AC	5 A	0.5 A
DL..TG	< 30 V AC/DC	0.1 A	0.05 A

Contact gap < 3 mm (μ).

If the pressure switch has switched a voltage > 24 V (> 30 V) and a current > 0.1 A at cos φ = 1 or > 0.05 A at cos φ = 0.6 once, the gold plating on the contacts will have been burnt through. It can then only be operated at this power rating or higher power rating.

9.2 DL..K

9.2.1 Ambient conditions

Enclosure to IEC 60529: IP 54.

Permitted ambient temperature in operation:
DL..K: -20 to +85°C (-4 to +185°F),
DL..KT: -40 to +60°C (-40 to +140°F).

Storage and transport temperatures:
-20 to +40°C (-4 to +104°F).

The set switching point may noticeably change in media and ambient temperatures below -30°C (-22°F). Check product suitability.

9.2.2 Mechanical data

Medium temperature = ambient temperature.

Max. inlet pressure $p_{max.}$ = withstand pressure: 5 kPa, differential pressure: 5 kPa.

Switching differential, see page 40 (9.2.5 Adjusting range).

Diaphragm pressure switch, tempered LSR diaphragm system.

Housing: glass fibre reinforced PBT plastic with low gas release.

Weight: 125 g (4.4 oz).


Recommended tightening torque:

Component	Tightening torque [Ncm]
Cover screws	60
M16 x 1.5 cable gland	50
Clamping terminal screws	80

9.2.3 Electrical data

Line entrance: M16 x 1.5 (1/2" NPT conduit),
clamping range: diameters of 4 to 10 mm.
Type of connection: screw terminals,
cable diameter: 0.5 to 1.8 mm (AWG 24 to AWG 13).

9.2.4 Dimensions

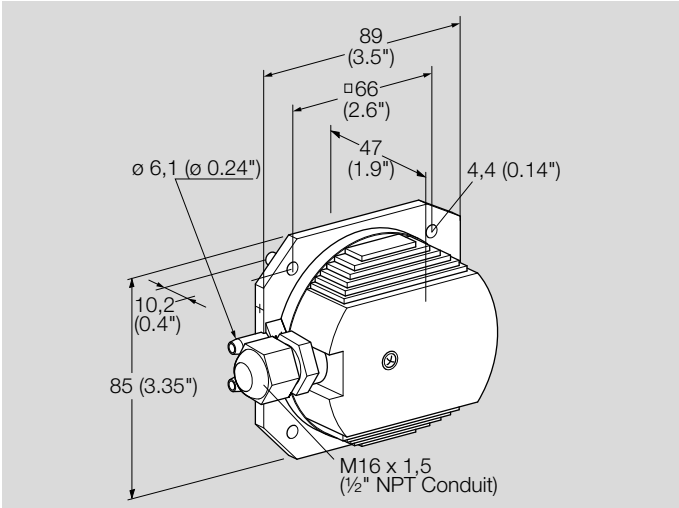

DL..K

9.2.5 Adjusting range

Type	Adjusting range [Pa]		Mean switching differential ¹⁾ [Pa]	
	min.	max.	min.	max.
DL 3,3K	20	330	8	20
DL 3,5K	30	350	10	20
DL 4,5K	30	500	12	25
DL 5,1 K	100	510	15	30
DL 8K	50	800	17	30

Type	Adjusting range [Pa]		Mean switching differential ¹⁾ [Pa]	
	min.	max.	min.	max.
DL 11K	100	1100	20	35
DL 16K	400	1600	30	40
DL 24K	200	2400	45	55
DL 40K	500	4000	70	90

Type	Adjusting range ["WC]		Mean switching differential ¹⁾ ["WC]	
	min.	max.	min.	max.
DL 3,5KT	0.12	1.4	0.04	0.08
DL 4,5KT	0.12	2	0.05	0.10
DL 8KT	0.20	3.2	0.07	0.12
DL 11KT	0.4	4.4	0.08	0.14
DL 16KT	1.6	6.4	0.12	0.16
DL 24KT	0.8	9.6	0.18	0.22
DL 40KT	2.0	16.0	0.28	0.36

1) Mean switching differential at min. and max. setting.

Type	Deviation from the switching point during testing pursuant to EN 1854 or by agreement	
DL 3,3K	$\pm 7 \text{ Pa} / \pm 15\%$	
DL 3,5K, DL 3,5KT	$\pm 5 \text{ Pa} / \pm 15\%$	$\pm 0.02 \text{ "WC} / \pm 15\%$
DL 4,5K, DL 4,5KT	$\pm 5 \text{ Pa} / \pm 15\%$	$\pm 0.02 \text{ "WC} / \pm 15\%$
DL 5,1 K	$\pm 15\%$	
DL 8K, DL 8KT	$\pm 14 \text{ Pa} / \pm 15\%$	$\pm 0.06 \text{ "WC} / \pm 15\%$
DL 11K, DL 11KT	$\pm 20 \text{ Pa} / \pm 15\%$	$\pm 0.08 \text{ "WC} / \pm 15\%$
DL 16K, DL 16KT	$\pm 15\%$	$\pm 15\%$
DL 24K, DL 24KT	$\pm 40 \text{ Pa} / \pm 15\%$	$\pm 0.16 \text{ "WC} / \pm 15\%$
DL 40K, DL 40KT	$\pm 15\%$	$\pm 15\%$

9.3 DL..A, DL..K

Ambient conditions

Enclosure to IEC 60529: IP 54 (IP 65).

Permitted ambient temperature in operation:

DL..A, DL..K: -20 – +80 °C (-4 – +176 °F),
DL..AH/..AN, DL..KH/..KN: -15 – +60 °C (+5 – +140 °F),
DL..T: -40 – +60 °C (-40 – +140 °F).

Storage and transport temperatures:

-20 to +40°C (-4 to +104°F).

The set switching point may noticeably change in media and ambient temperatures below -30°C (-22°F). Check product suitability.

9.3.1 Mechanical data

Medium temperature = ambient temperature.

Max. inlet pressure p_{max} . = withstand pressure, switching differential, see page 43 (9.3.4 Adjusting range).

Diaphragm pressure switch, NBR, silicone-free.

Housing: glass fibre reinforced PBT plastic with low gas release.

Weight: DL..A: 190 g (6,7 oz), DL..K: 220 g (7,8 oz)

Recommended tightening torque:

Component	Tightening torque [Ncm]
Cover screws	65
M16 x 1.5 cable gland	50
Clamping terminal screws	80
Rp 1/8 connection on upper housing section	250
Rp 1/4 (1/4" NPT) connection on lower housing section	600

9.3.2 Electrical data


Line entrance: M16 x 1.5 (1/2" NPT conduit), clamping range: diameters of 4 to 10 mm.

Type of connection: screw terminals, cable diameter: 0.5 to 1.8 mm (AWG 24 to AWG 13).

9.3.3 Dimensions

The following screw specifications apply when using a (1 mm thick) mounting plate and self-tapping screws for plastic:

	Hole dia./depth	Screw dia./length
DL..A..	Ø 2.7 x 8 mm	Ø 3.5 x 8 mm
DL..A..	Ø 3.5 x 8 mm	Ø 4 x 8 mm
DL 3K	Ø 2.7 x 8 mm	Ø 3 x 8 mm
DL 3K	Ø 3.5 x 8 mm	Ø 4 x 8 mm
DL 5–150K	Ø 3 x 16 mm	Ø 3.5 x 16 mm

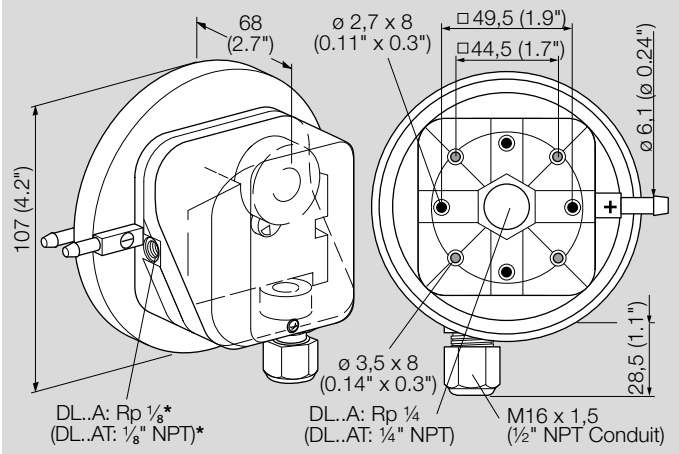

DL 1,5A, DL 3A

* Optional



9.3.4
Adjusting range

	Adjusting range ¹⁾ Pa (mbar)	Max. inlet pressure ²⁾ kPa (mbar)	Mean switching differential ³⁾ Pa (mbar)
DL 1,5A	-50–+150 (-0.5–+1.5)	5 (50)	10–16 (0.1–0.16)
DL 3A, DL 3K	20–300 (0.2–3)	5 (50)	10–16 (0.1–0.16)
DL 3AT, DL 3KT	30–300 (0.3–3)	15 (150)	10–16 (0.1–0.16)
DL 5A, DL 5K	40–600 (0.4–6)	30 (300)	20–30 (0.2–0.3)
DL 5AT, DL 5KT	50–500 (0.5–5)	30 (300)	20–30 (0.2–0.3)
DL 10A, DL 10K, DL 10AT, DL 10KT	100–1000 (1–10)	30 (300)	25–40 (0.25–0.4)

	Adjusting range ¹⁾ kPa (mbar)	Max. inlet pressure ²⁾ kPa (mbar)	Mean switching differential ³⁾ kPa (mbar)
DL 30A, DL 30K	0.25–3 (2.5–30)	30 (300)	35–90 (0.35–0.9)
DL 50A, DL 50K, DL 50AT, DL 50KT	0.25–5 (2.5–50)	30 (300)	0.08–0.15 (0.8–1.5)
DL 150A, DL 150K	3–15 (30–150)	30 (300)	0.3–0.5 (3–5)

	Adjusting range ¹⁾ ["WC]		Max. inlet pressure ²⁾ ["WC]	Mean switching differential ³⁾ ["WC]	
	min.	max.		min.	max.
DL 3AT, DL 3KT	0.12	1.2	58.5	0.04	0.06
DL 5AT, DL 5KT	0.2	2	117	0.08	0.12
DL 10AT, DL 10KT	0.4	4	117	0.1	0.16

	Adjusting range ¹⁾ ["WC]		Max. inlet pressure ²⁾ ["WC]	Mean switching differential ³⁾ ["WC]	
	min.	max.		min.	max.
DL 50AT, DL 50KT	1	20	117	0.3	0.6

- 1)
Adjusting tolerance $\pm 15\%$ of the scale value, but min. $\pm 4\text{ Pa}$ [$\pm 0.016\text{ "WC}$].
- 2)
Max. inlet pressure = withstand pressure.
- 3)
Mean switching differential at min. and max. setting.

Type	Deviation from the switching point during testing pursuant to EN 1854 Air pressure switches
DL 1,5A	$\pm 15\%$ or $\pm 6\text{ Pa}$ [$\pm 0.024\text{ "WC}$]
DL 3A, DL 3K DL 3AT, DL 3KT	$\pm 15\%$ or $\pm 6\text{ Pa}$ [$\pm 0.024\text{ "WC}$]
DL 5AT–DL50AT, DL 5KT–50KT	$\pm 15\%$ or $\pm 4\text{ Pa}$ [$\pm 0.016\text{ "WC}$]
DL 5–150A, DL 5–150K	$\pm 15\%$ or $\pm 4\text{ Pa}$ [$\pm 0.016\text{ "WC}$]

Type	Adjusting range ¹⁾ [mbar]	Max. inlet pressure ²⁾ [mbar]	Reset pressure ³⁾ [mbar]
DL 10..H, DL 10..N	1–10	300	0.4–1
DL 50..H, DL 50..N	2.5–50	300	1–2
DL 150..H, DL 150..N	30–150	300	2–5

Type	Adjusting range ¹⁾ ["WC]	Max. inlet pressure ²⁾ ["WC]	Reset pressure ³⁾ ["WC]
DL 10..H, DL 10..N	0.4–4	117	0.16–0.4
DL 50..H, DL 50..N	1–20	117	0.4–0.8
DL 150..H, DL 150..N	12–60	117	0.8–2

- 1)
Adjusting tolerance = $\pm 15\%$ of the scale value.
- 2)
Max. inlet pressure = withstand pressure.
- 3)
Difference between switching pressure and possible reset.
- Deviation from the switching point during testing pursuant to EN 1854 Air pressure switches: $\pm 15\%$.

9.4 DL 1–50E

Ambient conditions

Enclosure to IEC 60529:
IP 10 = any installation position,
IP 21 = electrical connection from below,
IP 42/44 = with cable grommet, see accessories.

Permitted ambient temperature in operation:
-20 to +80°C (-4 to +176°F),
DL..T: -40 to +60°C (-40 to +140°F).

Storage and transport temperatures:
-20 to +40°C (-4 to +104°F).

The set switching point may noticeably change in media
and ambient temperatures below -30°C (-22°F). Check
product suitability.

Mechanical data

Medium temperature = ambient temperature.
Max. inlet pressure $p_{max.}$ = withstand pressure,
switching differential, see page 45 (9.4.2 Adjusting range).
Diaphragm pressure switch, NBR, silicone-free.
Housing: glass fibre reinforced PBT plastic with low gas
release.

DL 1E, DL 3E: 145 g (5.1 oz),
DL 5E–50E: 115 g (4 oz).


Recommended tightening torque:

Component	Tightening torque [Ncm]
Cover screws	50
Strain relief facility	60


9.4.1 Dimensions

The following screw specifications apply when using a
(1 mm thick) mounting plate and self-tapping screws for
plastic:

	Hole dia./depth	Screw dia./length
DL 1–3E	Ø 2.7 x 8 mm	Ø 3 x 8 mm
DL 1–3E	Ø 3.5 x 8 mm	Ø 4 x 8 mm
DL 5–50E	Ø 3 x 16 mm	Ø 3.5 x 16 mm
DL 5–50E	Ø 4.2	M4

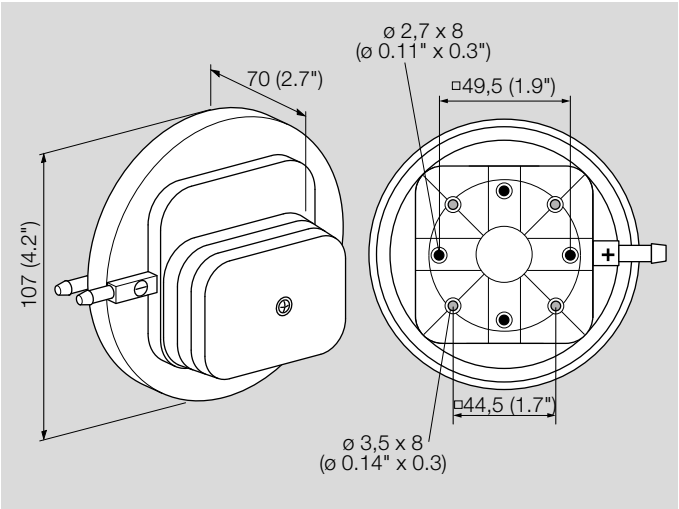

DL 1E, DL 3E

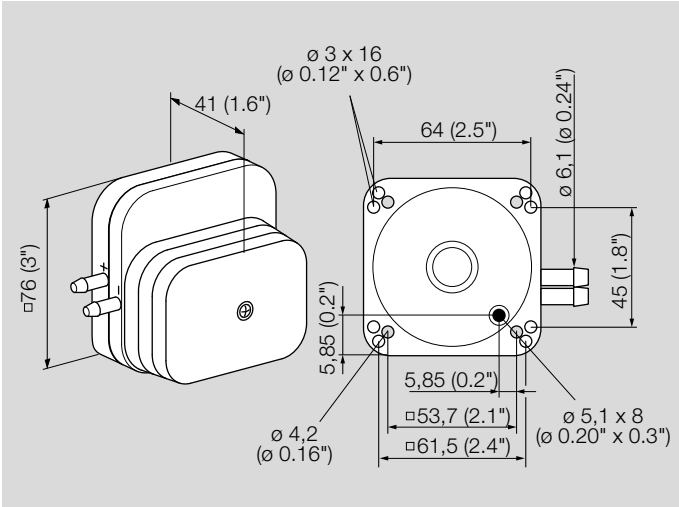

DL 5E-1P, DL 10E-1P, DL 50E-1P

9.4.2 Adjusting range

	Adjusting range ¹⁾ [Pa]		Max. inlet pressure ²⁾ [kPa]	Mean switching differential ³⁾ [Pa]	
	min.	max.		min.	max.
DL 1E	20	100	5	10	15
DL 3E	30	300	5	20	30
DL 5E	40	500	30	25	40
DL 5ET	50	500	30	25	40
DL 10E	100	1000	30	30	40
DL 50E	250	5000	30	50	130

	Adjusting range ¹⁾ ["WC]		Max. inlet pressure ²⁾ ["WC]	Mean switching differential ³⁾ ["WC]	
	min.	max.		min.	max.
DL 1ET	0.08	0.4	20	0.04	0.06

	Adjusting range ¹⁾ ["WC]		Max. inlet pressure ²⁾ ["WC]	Mean switching differential ³⁾ ["WC]	
	min.	max.		min.	max.
DL 3ET	0.12	1.2	20	0.08	0.12
DL 5ET	0.2	2	117	0.01	0.16
DL 10ET	0.4	4	117	0.12	0.16
DL 50ET	1	20	117	0.2	0.5

- 1) Switching point adjusting tolerance: ± 15% or by agreement.
2) Max. inlet pressure = withstand pressure.
3) Mean switching differential at min. and max. setting.

Type	Deviation from the switching point during testing pursuant to EN 1854 Air pressure switches
DL 1E, DL 1ET	± 15% or ± 5 Pa [± 0.02 "WC]
DL 3E, DL 3ET	± 15% or ± 6 Pa [± 0.02 "WC]
DL 5E–50E, DL 5ET–50ET	± 15%

9.5 DL 2–35E

Ambient conditions

Enclosure to IEC 60529:
IP 00 = without cover,
IP 10 = any installation position with cover,
IP 21 = opening in cover points downwards,
IP 42/44 = cover with cable grommet.

Permitted ambient temperature in operation:
DL..E: -20 to +85°C (-4 to +185°F),
DL..EH: -40 to +110°C (-40 to +230°F),
DL..T: -40 to +60°C (-40 to +140°F).

Storage and transport temperatures:
DL..E, DL..T: -20 to +40°C (-4 to +104°F),
DL..EH: -20 to +60°C (-4 to +140°F).

Mechanical data

Medium temperature = ambient temperature.
Max. inlet pressure $p_{max.}$ = withstand pressure or differential pressure:
DL..E = 5000 Pa (20 "WC),
DL..EH = 1500 Pa (6 "WC),
DL..ET = 5000 Pa (20 "WC).

Switching differential, see page 47 (9.5.2 Adjusting range).

Diaphragm pressure switch, tempered LSR diaphragm system.


Housing: glass fibre reinforced PBT plastic with low gas release.

Weight: 83 g (2.9 oz).

Recommended tightening torque:

Component	Tightening torque [Ncm]
Cover screws	65
Strain relief facility	65

9.5.1 Dimensions

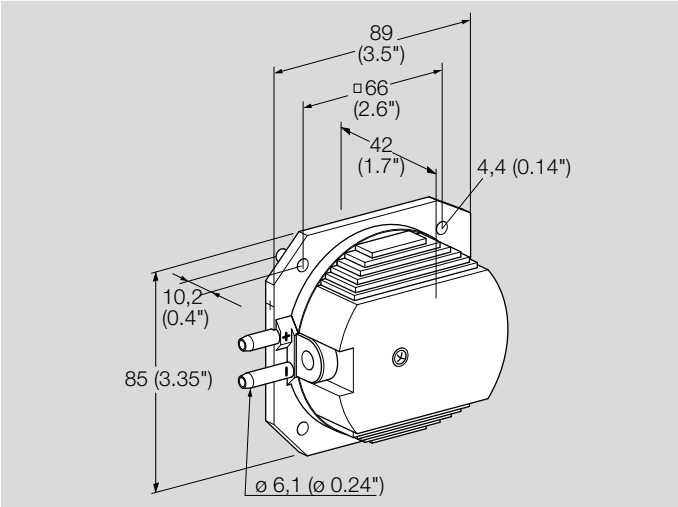

DL 2–35E

9.5.2 Adjusting range

Type	Adjusting range ¹⁾ [Pa]		Mean switching differential ²⁾ [Pa]	
	min.	max.	min.	max.
DL 2E	20	200	15	25
DL 2ET	30	200	15	25
DL 2EH	45	200	15	25
DL 4E, DL 4ET	50	400	20	50
DL 4EH	70	400	20	50
DL 14E, DL 14ET	300	1400	30	60
DL 35E, DL 35ET	1200	3500	60	100

Type	Adjusting range ¹⁾ [°WC]		Mean switching differential ²⁾ [°WC]	
	min.	max.	min.	max.
DL 2ET	0.12	0.8	0.05	0.10
DL 4ET	0.2	1.6	0.08	0.20
DL 14ET	1.20	5.6	0.12	0.24
DL 35ET	4.8	14.1	0.24	0.40

- 1) Adjusting tolerance ± 15% of the scale value, but min. ± 10 Pa
[± 0.04 °WC].
- 2) Mean switching differential at min. and max. setting or by agreement.

Type	Deviation from the switching point during testing pursuant to EN 1854 Air pressure switches
DL 2E, DL 2ET	± 15%/min. ± 6 Pa [± 0.02 °WC]
DL 2EH	± 15%/min. ± 8 Pa
DL 4E, DL 4ET	± 15%/min. ± 8 Pa [± 0.03 °WC]
DL 4EH	± 15%/min. ± 12 Pa
DL 14E, DL 14ET	± 15%/min. ± 40 Pa [± 0.16 °WC]
DL 35E, DL 35ET	± 15%/min. ± 90 Pa [± 0.36 °WC]

10 Converting units

See www.adlatus.org

11 Maintenance cycles

DL requires little servicing.

We recommend a function check once a year.

For more information

The Honeywell Thermal Solutions family of products includes Honeywell Combustion Safety, Eclipse, Exothermics, Hauck, Kromschroder and Maxon. To learn more about our products, visit ThermalSolutions.honeywell.com or contact your Honeywell Sales Engineer.

Elster GmbH
Strotheweg 1, D-49504 Lotte
T +49 541 1214-0
hts.lotte@honeywell.com
www.kromschroeder.com

© 2025 Elster GmbH

We reserve the right to make technical modifications in the interests of progress.

